

Saab 9-5 – Special install instructions

The Saab 9-5 has a special security frame that's make the installation of CDConnect a little bit more difficult. Then you have removed the headunit it should look like the picture below:





1. Removing the security frame

You have to remove the security frame from the car to get close to the connectors. Because of the frame is a security frame, it's not easy to remove. Start by removing the SID and AC units. To remove the frame, bending for a few minutes would do the job.



2. Separating the connectors

The three connectors are combined to one connector. You have to separate the third connector to replace it with the CDConnect connector. The separation is made by using a cutting plier or similar.

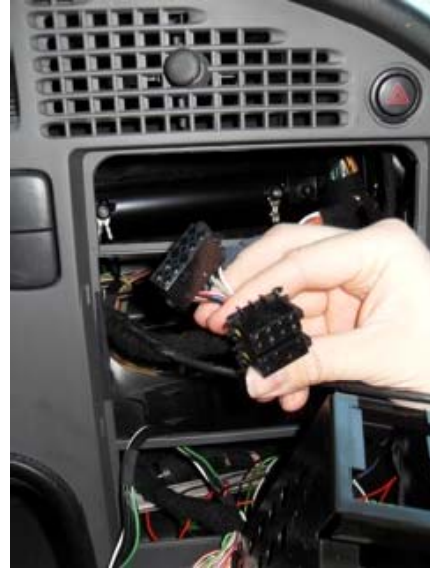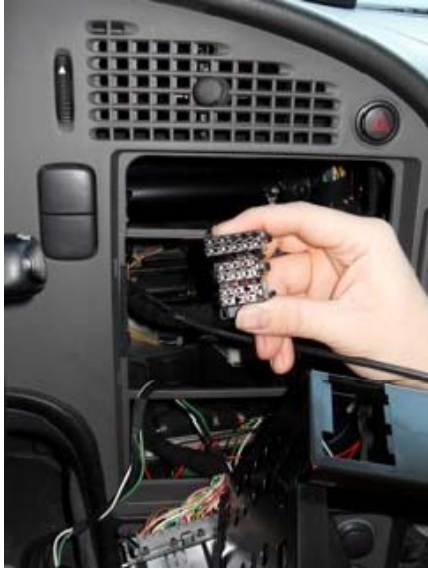

3. Connection

Connect the old connector to the black CDConnect connector and secure it with a cable tie.



4. **Mounting the security frame**

Mount the Security frame with the new red connector and the two old ones. The connectors lock function in the frame is not working like they did before. Therefore you have to guide the connectors in place simultaneous with pushing in the headunit.

